

ALWAYS WEAR PROTECTIVE GOGGLES AND GAUNTLETS.
ONLY USE APPROVED NON-CAUSTIC DETERGENT.

ENSURE WATER IN TANK IS TOPPED UP.
ONLY TO BE OPERATED BY TRAINED STAFF.
NOT SUITABLE FOR CLEANING SILVER, TIN OR NON-STICK UTENSILS.



Scrape off any stuck-on food or carbon.



Lift lid and secure in place with latch



Raise basket to desired height and secure.



Lower items into tank / basket slowly to avoid splash.



Pull latch to release and slowly close lid.



Remove items from tank.



Rinse items with clean cold water before use.

SOAK TIMES

- Grill Plates | 8 - 12 hours | Daily
- Extraction Filters | 2 - 4 hours | Daily
- Pots & Pans | 2 - 4 hours | As required
- Cooker Tops | 2 - 4 hours | As required
- Oven Fittings | 2 - 4 hours | As required

Cleaning times vary dependent on the level of soiling.

The above times are a guide.

NEED HELP?



Scan the above or visit
thedecarbonizer.co.uk/helpandfaq

ADDITIONAL SUPPORT

For additional support and technical help please contact our team on:

T: 0161 728 8301
E: hospitalityuk@tenantco.com

Or visit
www.thedecarbonizer.co.uk/helpandfaq